


NEX -APP

Setting the temperature and timers.




*This manual is provided on an IOS platform. For Android system there may be slight differences


Step 1. Click on the area with the desired heating priority.

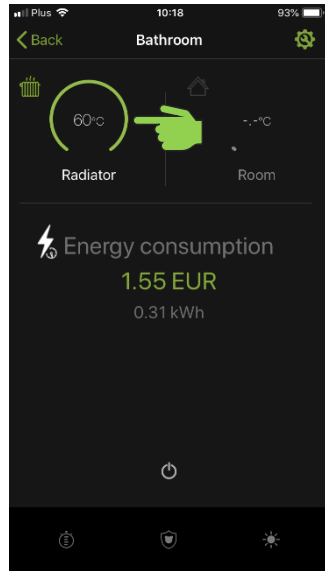


Step 2. Use the bar to set the temperature that the heating element should maintain.

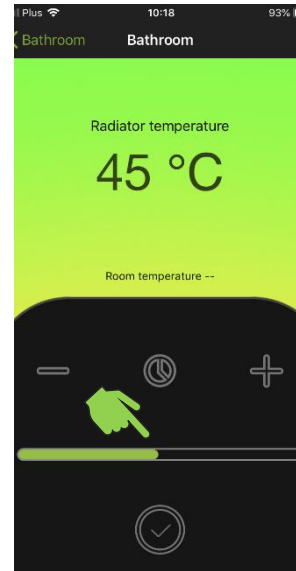


Step 3. Press the timer icon to enter the timer activation and setup menu.

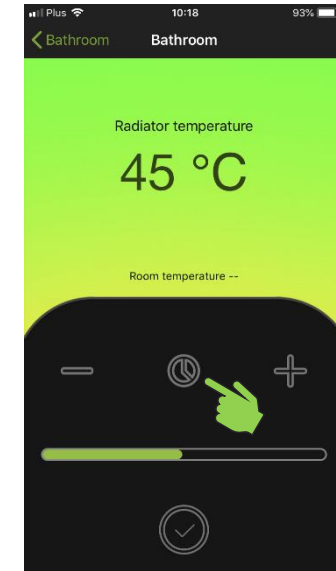


Step 4. Select the timer you want to set.

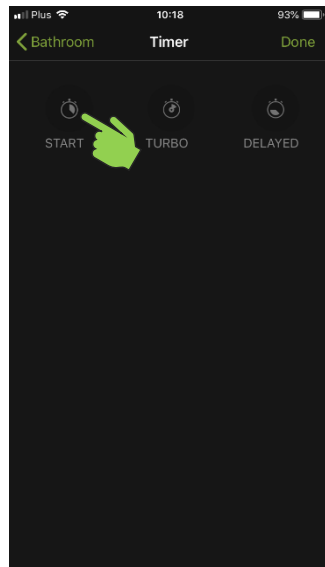


Step 5. Specify the temperature the timer will operate at.

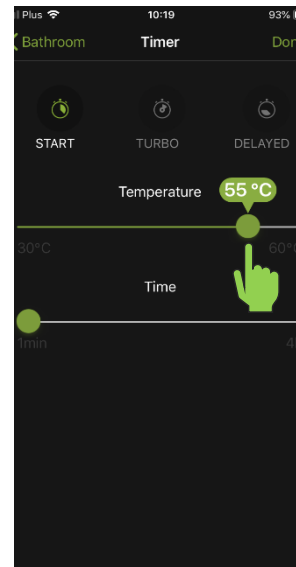

Step 6. Specify the time that the timer will run.

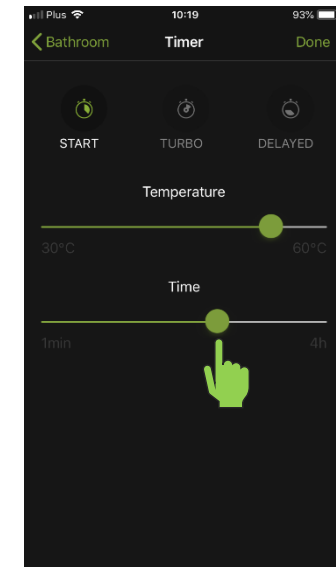

Step 7. Press the button with the check mark on it to save settings.

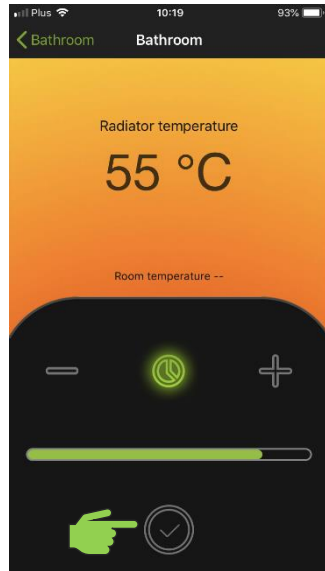

Step 8. Done, the timer is set and activated. The NEX APP will start working according to the settings.



Step 9. To stop the timer, turn the heating element off and on.

