


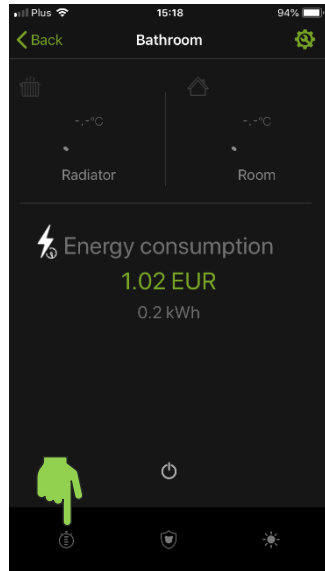
NEX - APP

Manual for switching on and setting daily / weekly NEX APP heater operation schedule




*This manual is provided on an IOS platform. For Android system there may be slight differences


Step 1. To start setting, tap the **schedule** icon - .



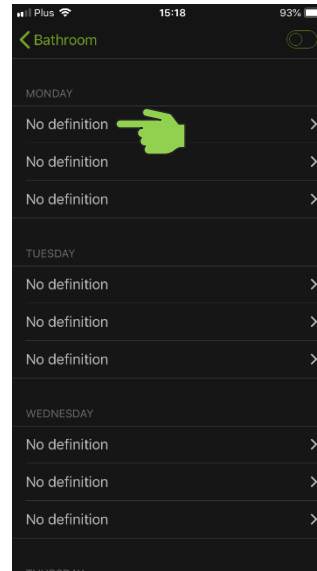


Step 2. There are 3 time zones available for each day of the week. Select one of the **zones**.

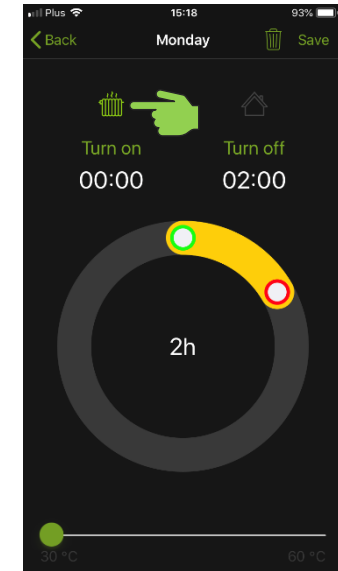


Step 3. Select heating **priority**: radiator  or room .




Step 4. Specify the heating **operation time**.
 - start of work.  - end of work.

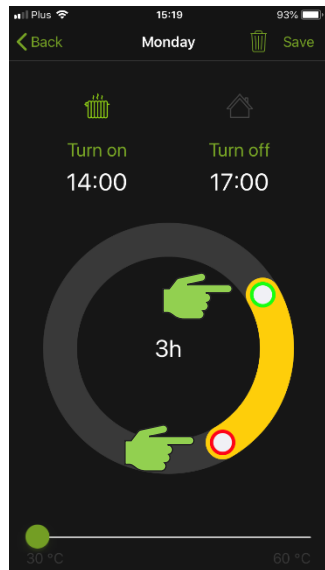


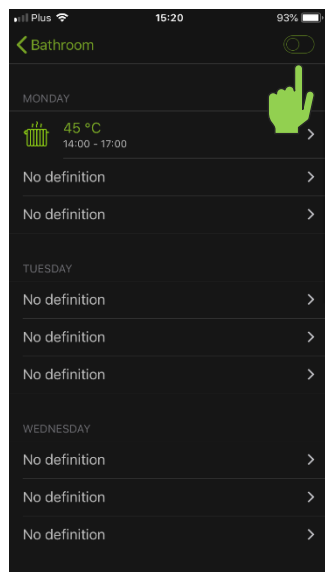
Step 5. Specify the **target temperature**.
30-60°C for the radiator and 17-24°C for the room.

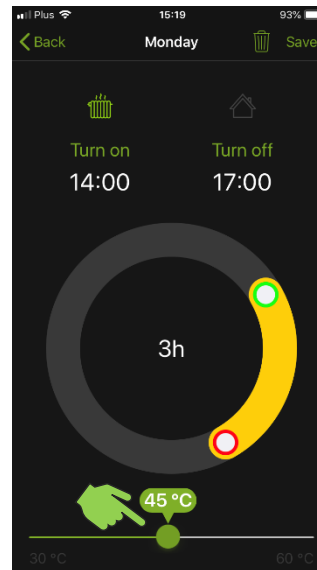


Step 6. Save your settings by pressing the **Save** button.

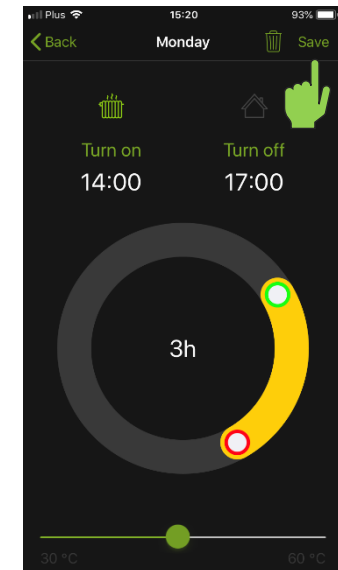

Step 7. Press the icon ,
to **activate** the schedule program.




Step 8. The program has been **configured and enabled**, the
heating element will work according to the schedule.

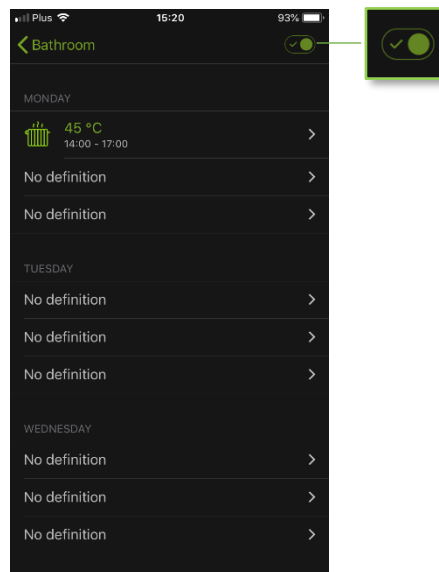

Step 9. The heater will **indicate** schedule operation by **flashing**
the LED light of the on/off button.



Step 10. Press the icon ,
to **deactivate** the schedule program.

